


Water Pump Classic

Installation

Apply grease to **ALL** bolts prior to assembly
Note to Plumber.
Where required, fit appropriate Back Flow Prevention.

If connecting to non portable water warning label must be displayed.

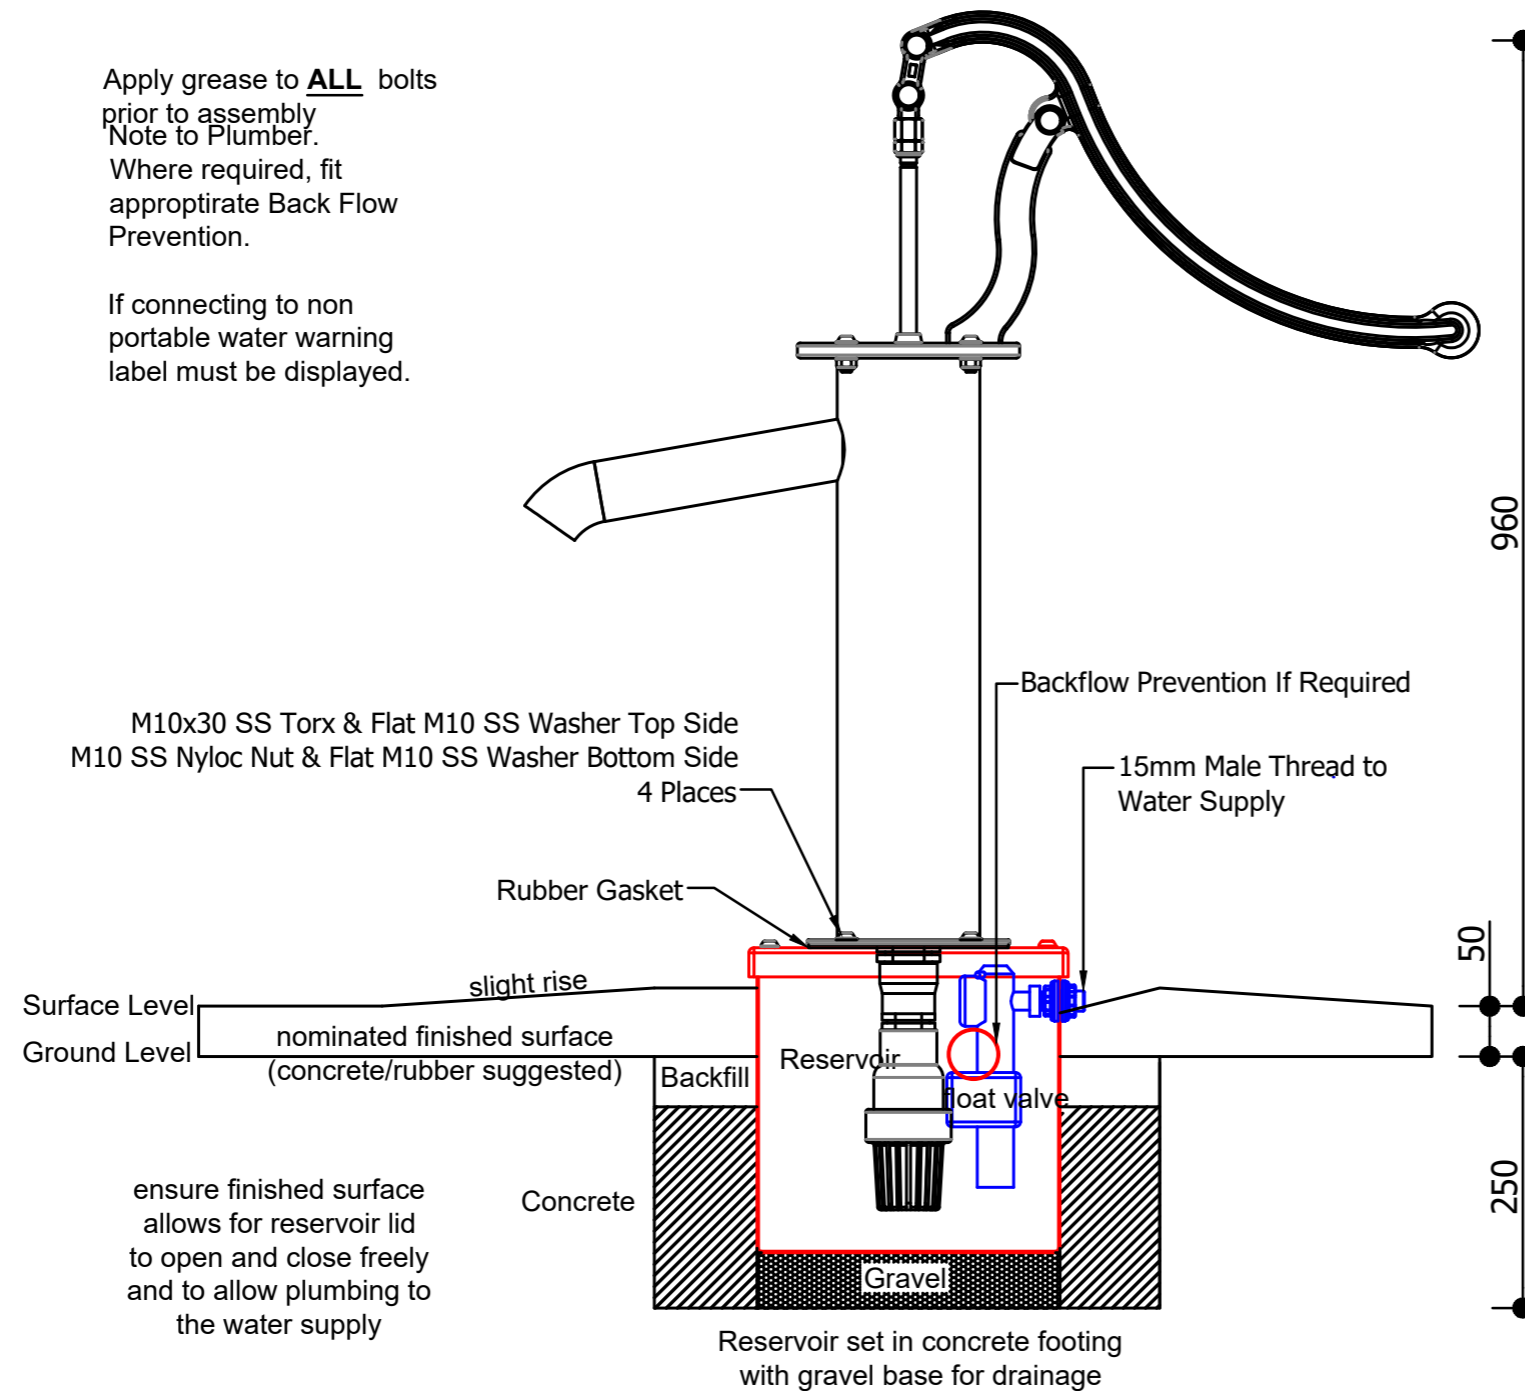

Footing quantities and depths From ground level

| Item | Qty | Hole Diameter | Hole Depth |
|------|-----|---------------|------------|
| Pump | 1 | 500mm | 250mm |

Note:

This product is designed for 50mm softfall. Check the proposed on site softfall depth. If it is not 50mm please adjust depths of post holes accordingly, to achieve correct overall subsurface depth. This will maintain correct height of equipment above undersurface level.

Water Pump Classic

SEDI REM QUID MA CONSEQUAE DOLUPTAT QUATIUN DELITATIONET EXCERA NIHILIQUIS AD QUISTIS EATUR, NON REHENIS EATIONSECAE
NON NAM QUI VERE DENDAE AUT ID EOSAM ETUR SIMAGNIET, ILIT AUT AUT ET PORI CUM QUAS RE, EATUR?
CAEPROVID UT HICIUR SIT UT DOLOREM VOLOR SIT QUI TEMPEL MA CONSEQUI OD ET AUT UT LIA IUS DOLESEQUE CUS MOLORROVIT



| Rev# | DATE | PR# |
|------|------|-----|
| - | - | - |
| | | |
| | | |

| | | | | | |
|--------------------------|-------------------|------------------|----------------|--------------------|------------------------|
| Playbook ID PN444 | DWG No. 01 | SCALE NTS | ISSUE A | DRAWN BY LC | DATE 01-03-2023 |
| Job No. | Job Name | Planned by | Plan date | QTY | MADE BY |
| | | | | | |

natura
Australian nature playgrounds